




# Carlisle Machine Works, Inc.

## Mini CC "Crowley" Marver Installation

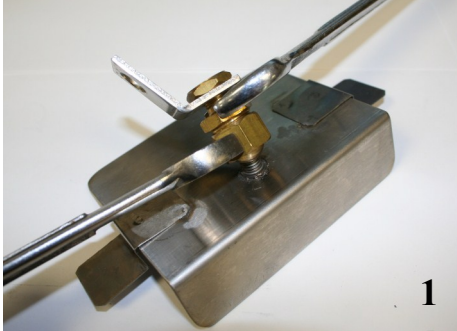

1

To install the "Crowley" marver on the Mini CC you will need:

One 5/8" wrench and  
Two 11/16" wrenches


1. Using the two 11/16" wrenches, remove the top of the marver from the marver bracket at the ball joint (images 1 and 2).

2. Using an 11/16" wrench, remove the Mini CC from its base by loosening the ball joint (the large nut, image 3). Then, lower the burner body onto the baseplate, with the base mounting arm positioned between the oxygen and gas tubes of the burner (image 4).


3. Remove the nut from the rear of the mounting arm (image 5). Then, using that nut, install the marver attachment bracket. When installing the bracket, make sure it overhangs the oxygen and propane valves not the body of the torch (image 6).




2

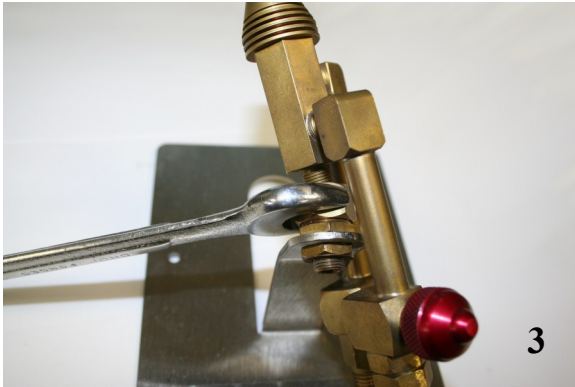


3

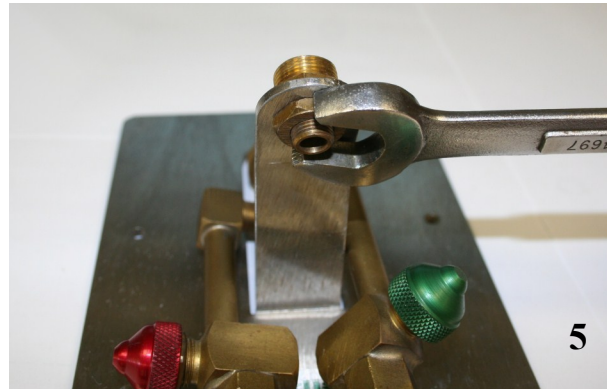

5

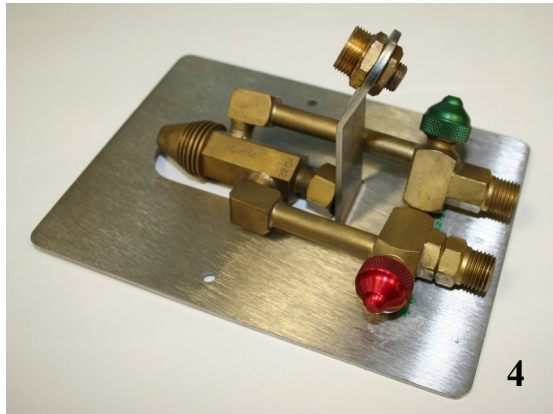

4

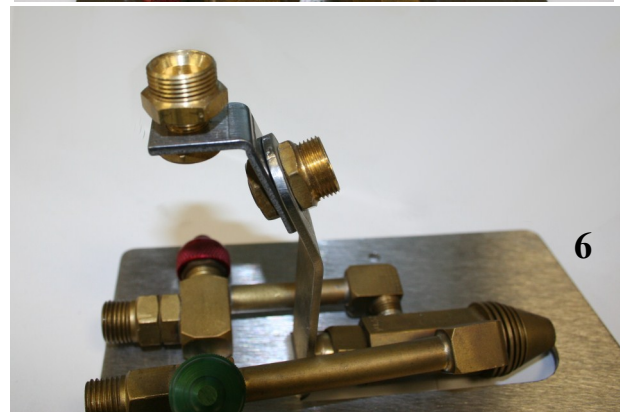



6

**Carlisle Machine Works, Inc.,**  
**P.O. Box 746, 412 S. Wade Blvd., Bldg. #5, Millville, NJ 08332**  
**Toll Free Phone : (800) 922 - 1167      Local Phone : (800) 825 - 0627**  
**Fax: (856) 825 - 5510**  
**Website: [carlislemachine.com](http://carlislemachine.com)      Email: [carlisle@carlislemachine.com](mailto:carlisle@carlislemachine.com)**



4. Reattach the burner, by the ball joint, to the top of the mounting arm and securely tighten using an 11/16" wrench (image 7).

5. Reattach the marver to the marver bracket using two 11/16" wrenches (image 8).

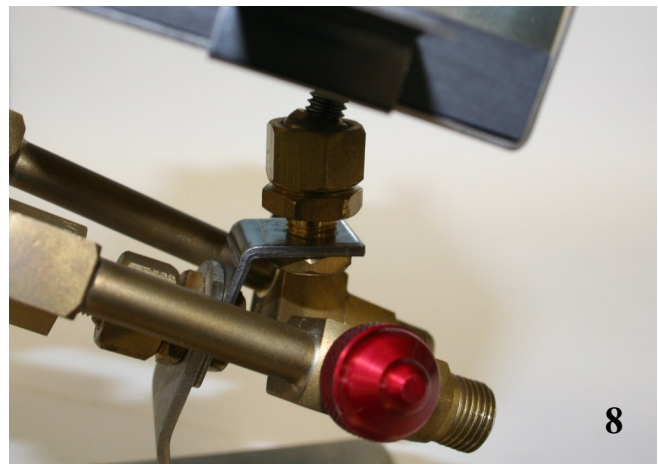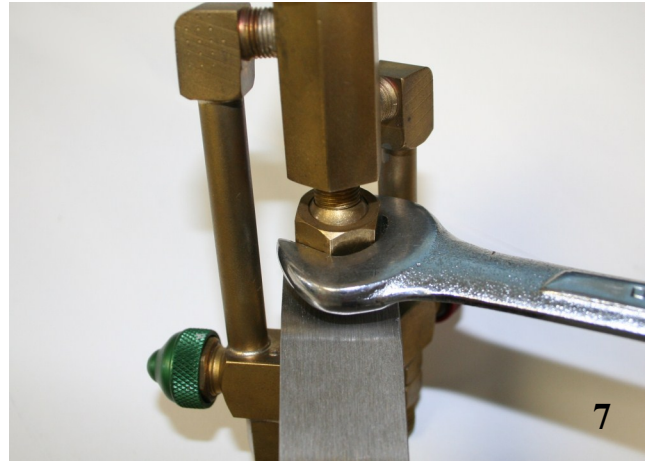

**Carlisle Machine Works, Inc.,**  
**P.O. Box 746, 412 S. Wade Blvd., Bldg. #5, Millville, NJ 08332**  
**Toll Free Phone : (800) 922 - 1167      Local Phone : (800) 825 - 0627**  
**Fax: (856) 825 - 5510**  
**Website: [carlismemachine.com](http://carlismemachine.com)      Email: [carlisle@carlismemachine.com](mailto:carlisle@carlismemachine.com)**

